



XEBEX

F I T N E S S

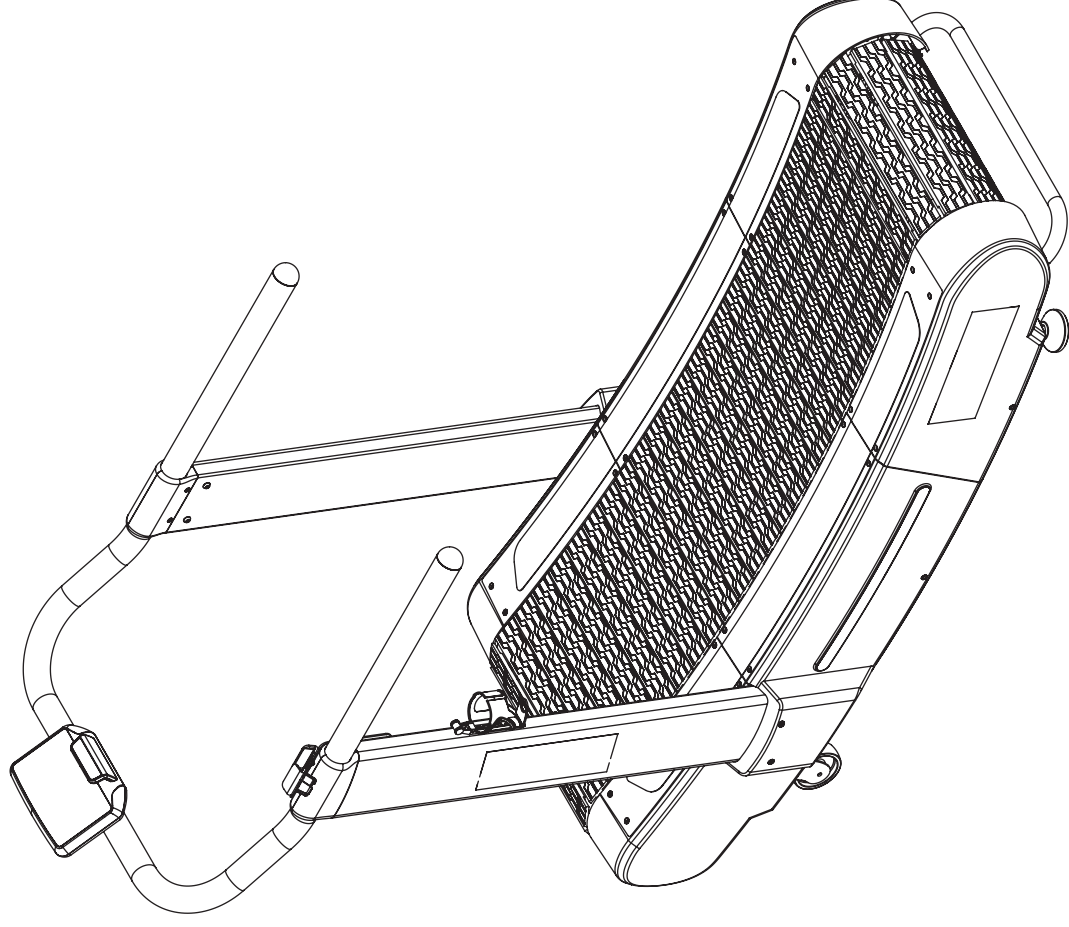


ASSEMBLY INSTRUCTIONS


A- ×1

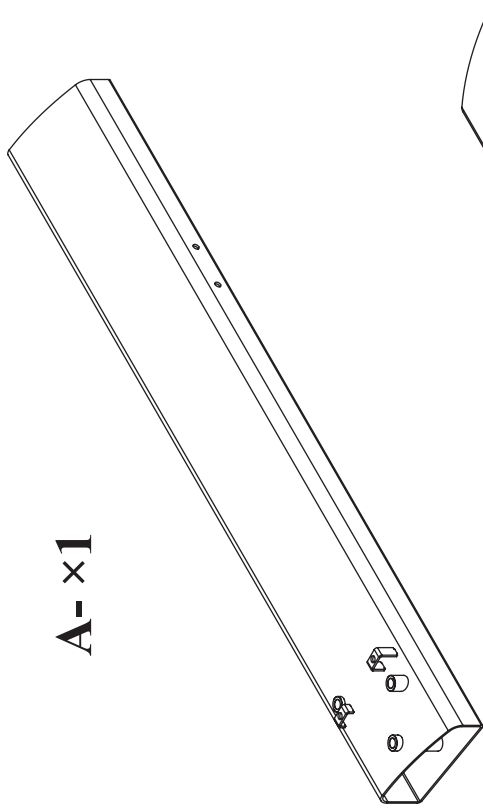


B- ×1

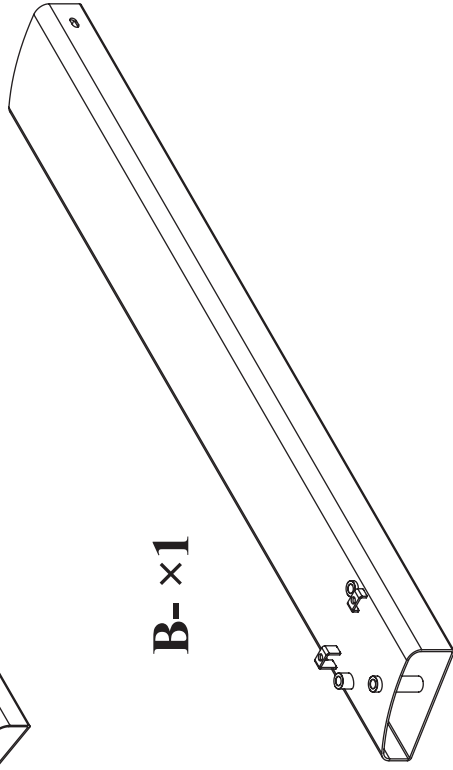


C- ×1

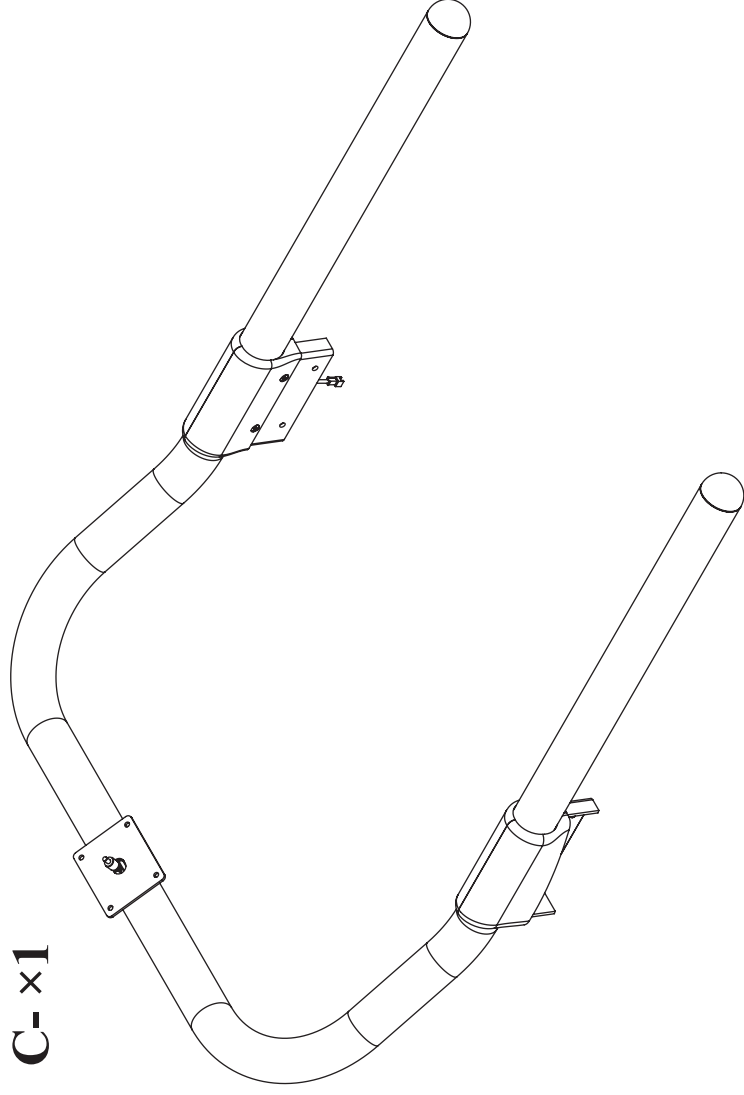


D- ×1

 


E- ×1

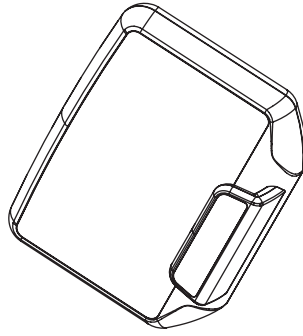


F- ×1

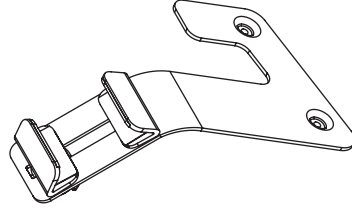


G- ×1

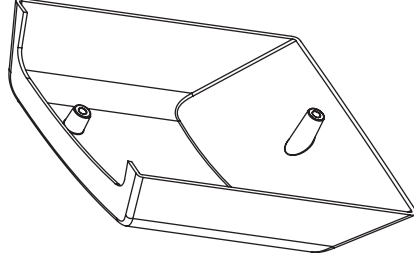


H- ×1

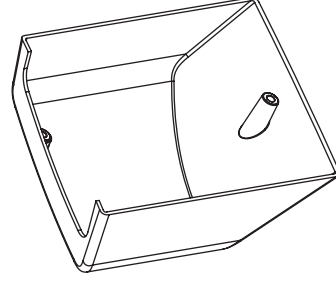


6- M10×90L AA

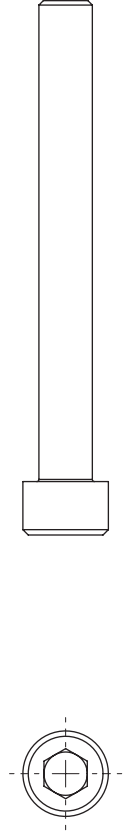

6- M8×12L GG

 

6- Ø18×Ø10.5×1.5t BB

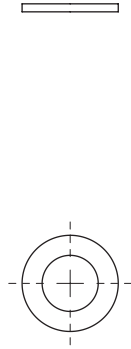

6- M5×16L HH



2- M5×16L CC



3MM LL



6- M5×12L DD



4MM KK



2- M5×25L EE




5MM JJ





2- M5×30L FF



8MM II

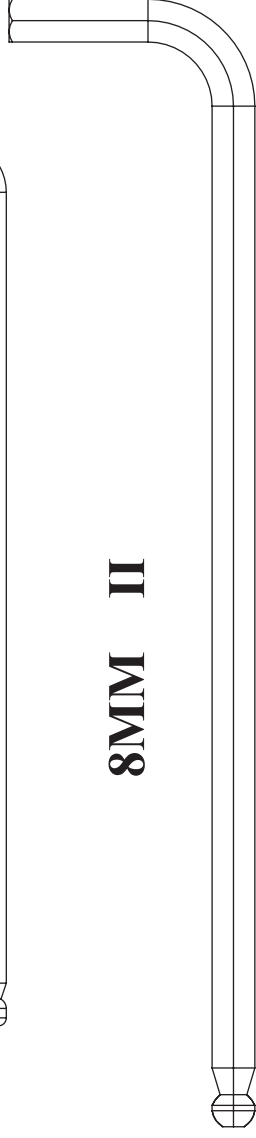


Unpack the treadmill base and parts and ensure that all listed parts are included in the packaging. Place the treadmill base facing forward (logo will be at the rear of the base).

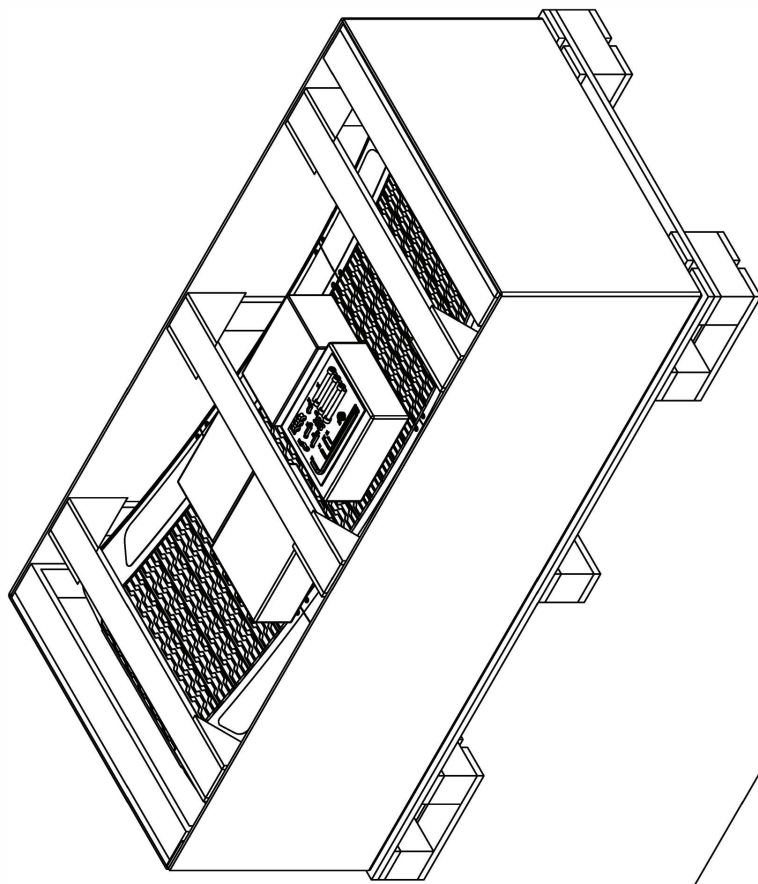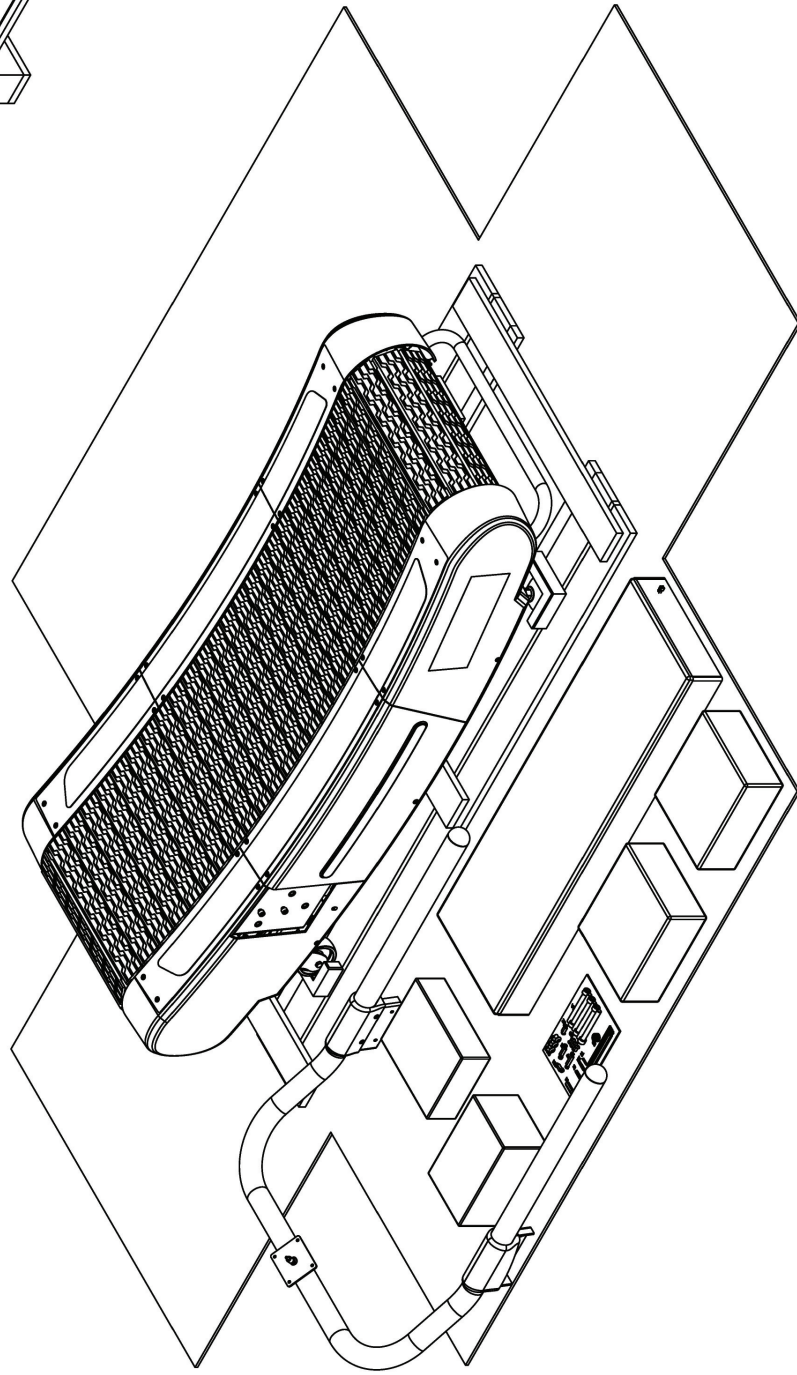

With the treadmill base facing forward, attach the left upright handle (A) to the left side of the base with 3 screws (AA) and 3 washers (BB), using the included 8mm Allen wrench (II).

FRONT

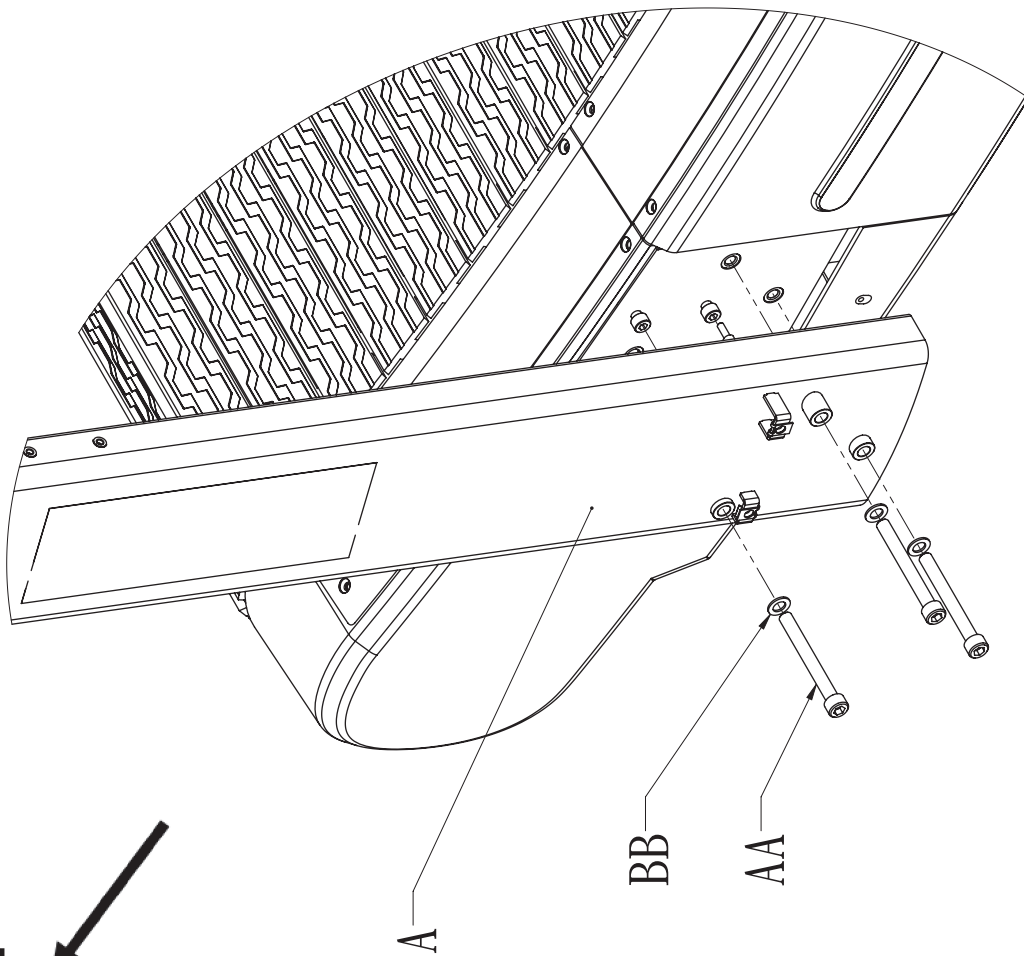

8MM II

AA x3




BB x3




On the right side of the base, connect wire FW to wire BW and repeat the previous step to attach the right upright handle (B) to the right side of the base.

2

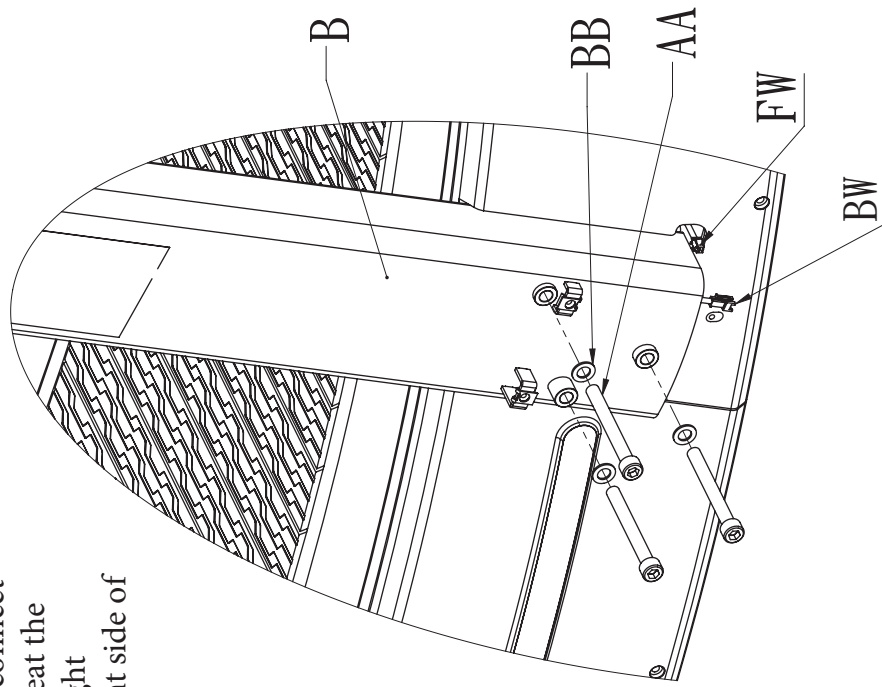

FRONT

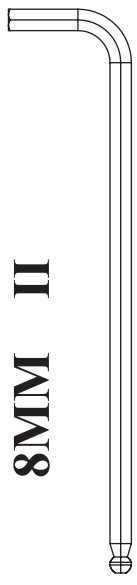


AA ×3



BB ×3



3

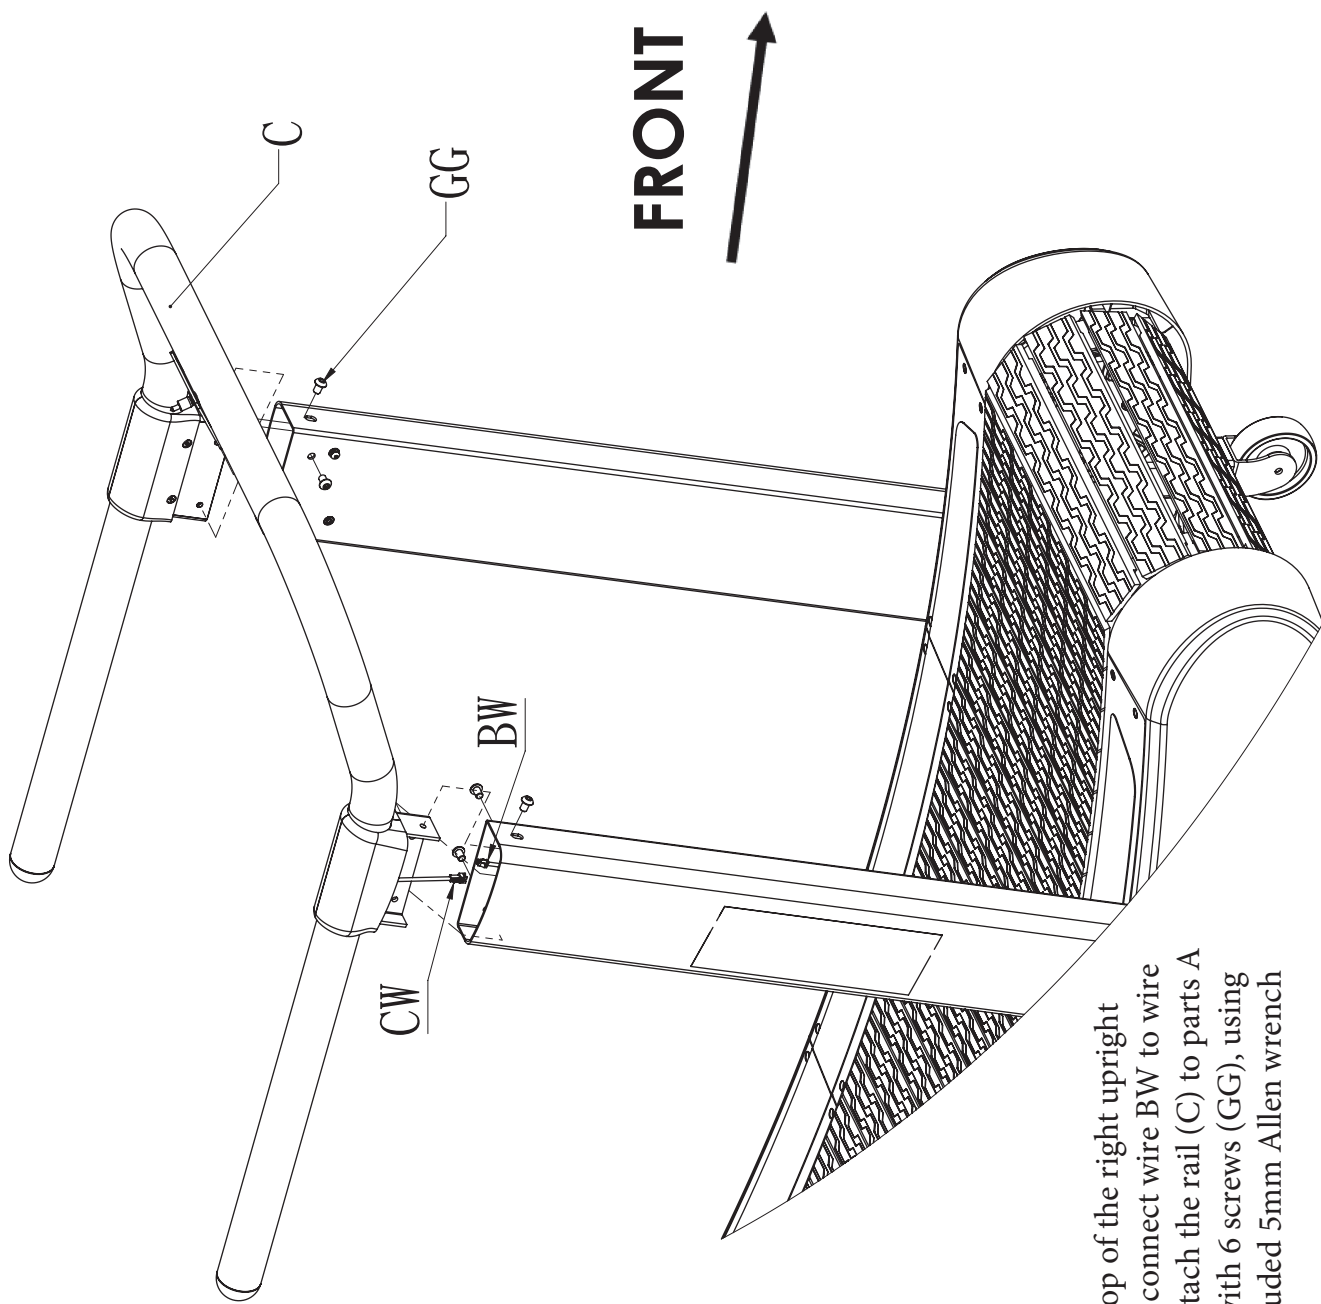

At the top of the right upright handle, connect wire BW to wire CW. Attach the rail (C) to parts A and B with 6 screws (GG), using the included 5mm Allen wrench (JJ).

5MM JJ



GG ×6




Attach the cup holder (D) to the left upright handle with 2 screws (CC) using the included 3mm Allen wrench (LL).

At the center of the rail, connect wire CW to wire EW. Attach the console (E) to the center of the rail (C) with 4 screws (DD) using the 3mm Allen wrench (LL).

Attach the phone holder (F) to the left side of the rail using 2 screws (DD) using the 3mm Allen wrench (LL).

4

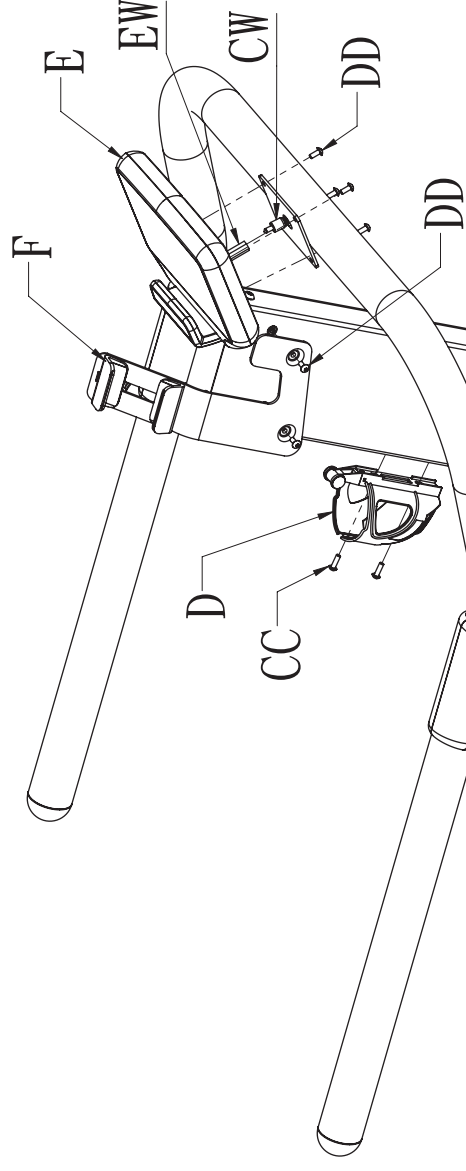

3MM LL



CC × 2



DD × 6



5

Attach the left upright handle cover (G) to the left upright handle with 1 screw (HH) at the top right corner of the cover, 1 screw (EE) at the left corner, and 1 screw (FF) at the bottom of the cover, using the included 4mm Allen wrench (KK).

Attach the right upright handle cover (H) to the right upright handle with 1 screw (HH) at the top right corner of the cover, 1 screw (EE) at the left corner, and 1 screw (FF) at the bottom of the cover, using the included 4mm Allen wrench (KK).

4MM KK

