

Runner Maintenance

SERVICE	Daily	Monthly	Annually
Wipe down all surfaces including the rail, display and covers with a mild soap solution and dry thoroughly.	X		
Inspect unit for noisy, damaged or loose components, if any part is damaged, replacement is needed.	X		
Ensure the unit does not rock. If necessary, re-adjust the leveling feet.	X		
Inspect the entire unit for loose hardware such as all screw connections for tightness, including the uprights, handrail, frame and plastic covers. Tighten loose hardware such as nuts and bolts.		X	
Move the treadmill and clean/vacuum dust, lint or debris found inside the belt and under the frame.		X	
*Lubricate the Pillow Block Bearing with the lubrication suggested as below			X

■ Remove the right, front,middle covers.
Note: There are 2 cover connecting plates.

BEARING

BEARING


BEARING

BEARING

■ Remove the left, front,middle covers.
Note: There are 2 cover connecting plates.

SCAN ME



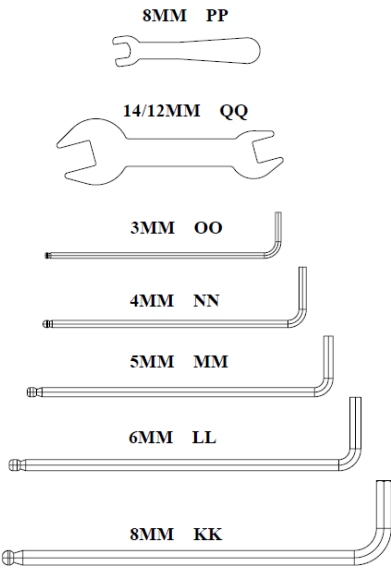

Lubrication:
* The Pillow Block Bearing should be lubricated annually



To Clear Maintenance Reminder Message From Console

- A. Press “Enter” and “START” buttons at the same time for 2 seconds, and the buzzer will sound
- B. When you see repair icon  , electronic scroll will show “clear service interval”, from right to left and it will show “YES”.

- To remove the monthly service, please press “ENTER” when it shows “YES”.
 - To keep monthly service, please press “UP” or “DOWN” for switching to “NO” and press “ENTER”.